tel. +48 44 646 44 81 tel. +48 44 648 50 89 fax +48 44 646 43 58 e-mail: info@polanik.com www.polanik.com



TECHNICAL SPECIFICATION USER MANUAL

Collapsible training hurdle with padded top bar

PP15-S480



File: 2015-05-18 PRODUCT SUPPORT Pawel Ciechanowski p.ciechanowski@polanik.com

tel. +48 44 646 44 81 tel. +48 44 648 50 89 fax +48 44 646 43 58 e-mail: info@polanik.com www.polanik.com



Thank you for choosing Polanik training hurdles.

I. General description and use

The hurdle is designed for athletics training of school children and youth. It's simple and durable construction is equipped with the height adjustment and the padded top bar.




tel. +48 44 646 44 81 tel. +48 44 648 50 89 fax +48 44 646 43 58 e-mail: info@polanik.com www.polanik.com



II. Technical specification

| Code | PP15-S480 |
|-------------------|--|
| Туре | training, collapsible |
| Top bar | aluminium, permanently fixed to telescope tubes, padded, length 1000 mm |
| Telescope tube | aluminium powder painted, spring-loaded button system of height adjustment, space between the axis 900 mm |
| Frame | galvanized steel |
| Feet | galvanized steel |
| Height [mm] | 400 |
| | 500 |
| | 600 |
| Weight [kg] | 2,7 |

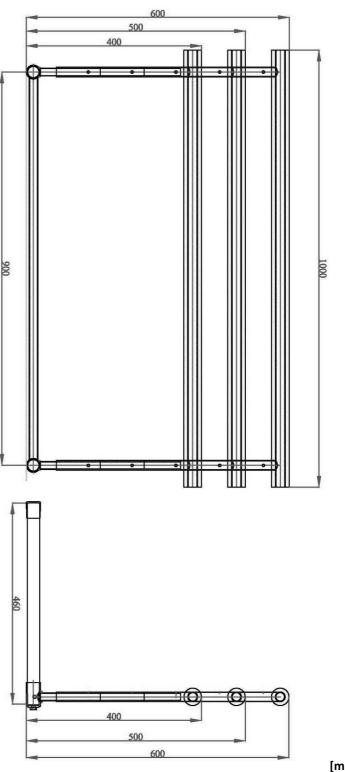


[mm]

tel. +48 44 646 44 81 tel. +48 44 648 50 89 fax +48 44 646 43 58 e-mail: info@polanik.com www.polanik.com



III. Assembly

The hurdles are delivered in parts. The top bar with telescope tubes (1) and the hurdle frame (2) are already assembled. The hurdle feet (3) should be slid into the frame sockets and screwed with included foot screws and washers.

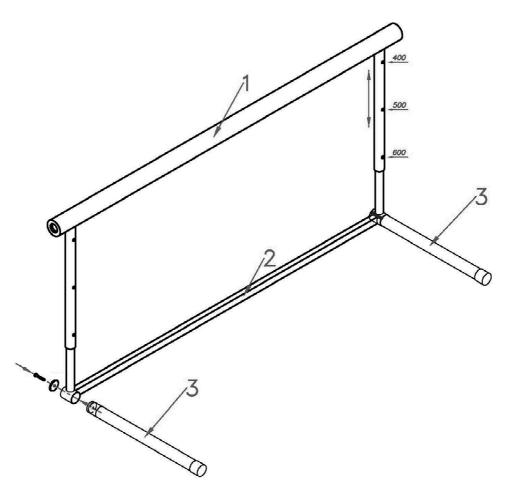

Attention!

The main goal of the hurdle collapsible construction is to assure easy and cheap transport. Please note that once you screw the feet down, the hurdle is practically non-dismountable. Therefore we do not recommend unscrewing the hurdle feet during idle periods. Removing the feet without proper tools can cause serious hurdle damages.

IV. Operation

The height adjustment is done by pressing simultaneously the spring-loaded buttons on both hurdle telescopes and sliding telescope tubes up or down.

V. Packing and transport

The hurdles are placed on pallets and foiled.

tel. +48 44 646 44 81 tel. +48 44 648 50 89 fax +48 44 646 43 58 e-mail: info@polanik.com www.polanik.com



VI. Remarks on maintenance

The hurdles must be stored in a roofed and dry place. They do not require any special maintenance measures apart from keeping them clean. Use commonly available cleaning agents. Before you start wiping the top bar covering, please try to clean a small spot on its bottom side in order to check the reaction with the PVC fabric.

Even the best technical solutions cannot substitute for common sense. The usage of the product must take place under the supervision of qualified coaches. The producer shall not be liable for any incidents caused by the improper assembly or its misuse. The producer reserves the right to introduce without warning changes in product constructions and colours.